



# HP G62-223CL Hard Drive Replacement

This guide will show the user how to remove the hard drive.

Written By: Garret Layton



## INTRODUCTION

This guide will show the user how to remove the hard drive.

---



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


## Step 1 — Battery Removal



⚠ Removing the battery while the laptop is still on may corrupt your files.

- Turn the device over to expose the bottom of the device.
- Slide the battery release all the way to the left.
- There will be a click and the battery will be released from its compartment.



## Step 2

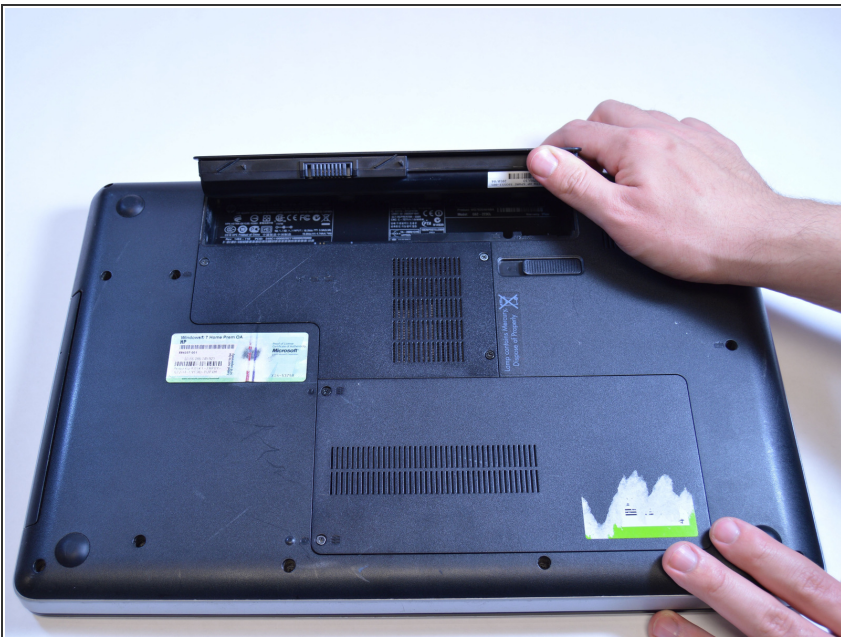

- Carefully remove the battery from its compartment.




## Step 3 — Hard Drive

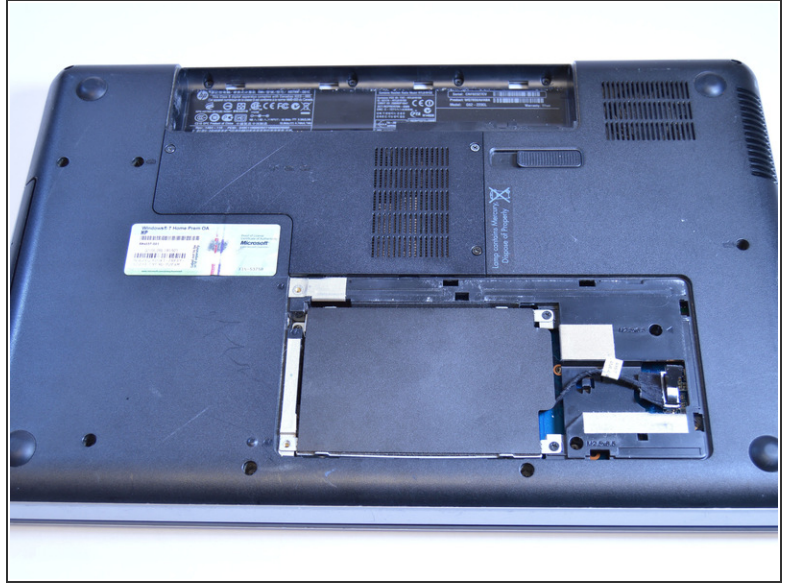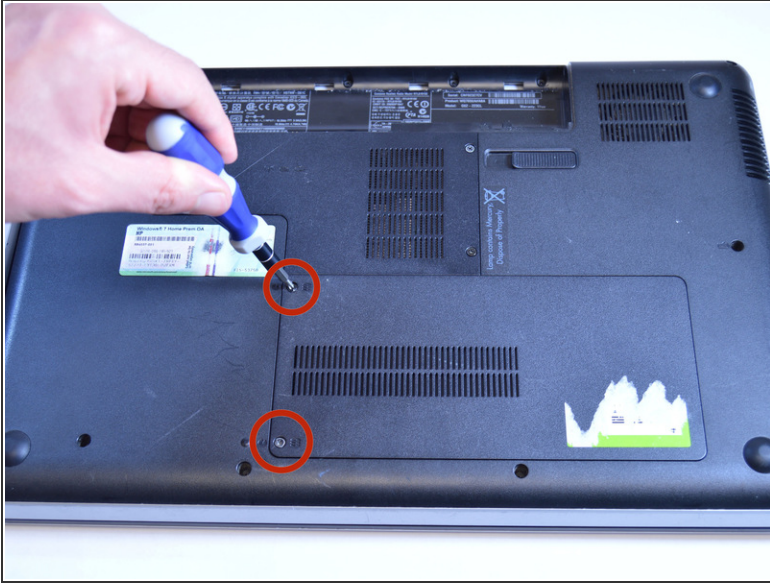

- Locate the two Phillips head retaining screws which secure the hard drive compartment.
- Use a Phillips #0 screwdriver to loosen the retaining screws.
- Remove the panel covering the compartment.

⚠ Ground yourself before attempting to touch any components. To ground yourself, touch a conductive metal to eliminate any static buildup in your body, which can damage computer components.

## Step 4

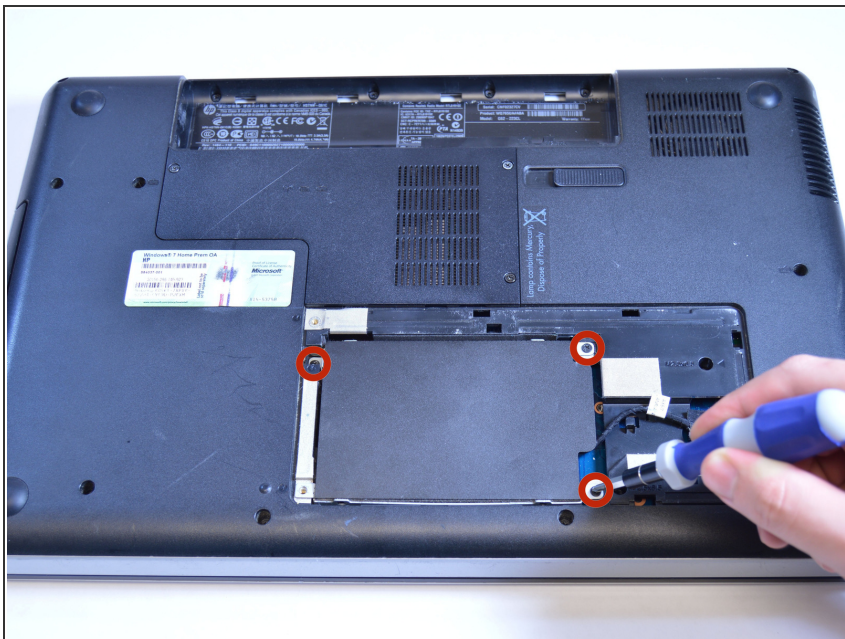

- Locate the three 6 mm Phillips head screws for the hard drive.
- Use a Phillips #0 screwdriver to remove the screws.

## Step 5



## Step 6



- Locate the two 6 mm Phillips head screws on each side of the hard drive.
- Use a Phillips #0 screwdriver to remove the screws.
- Remove the cover from the hard drive.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-03 12:06:48 AM.